


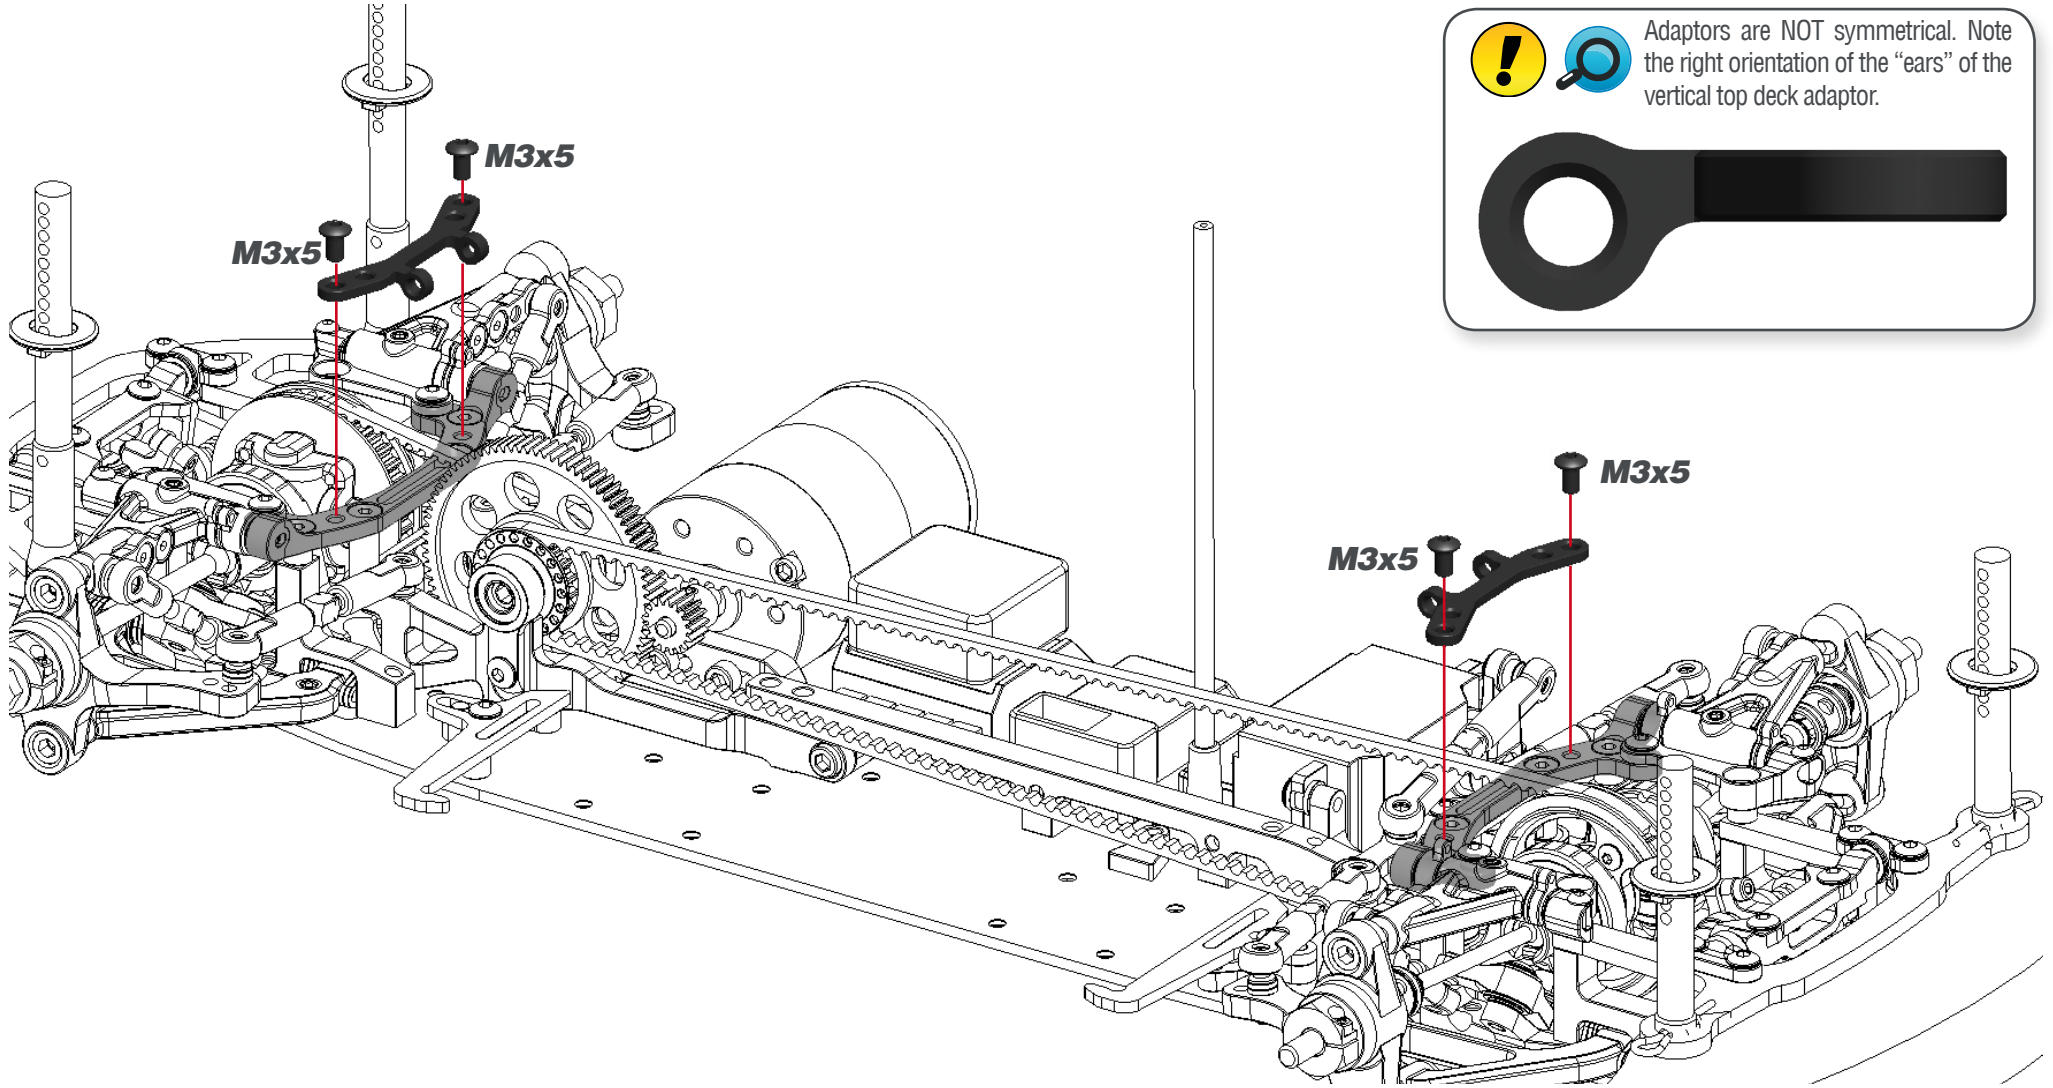






## STEP 1




STEP 2

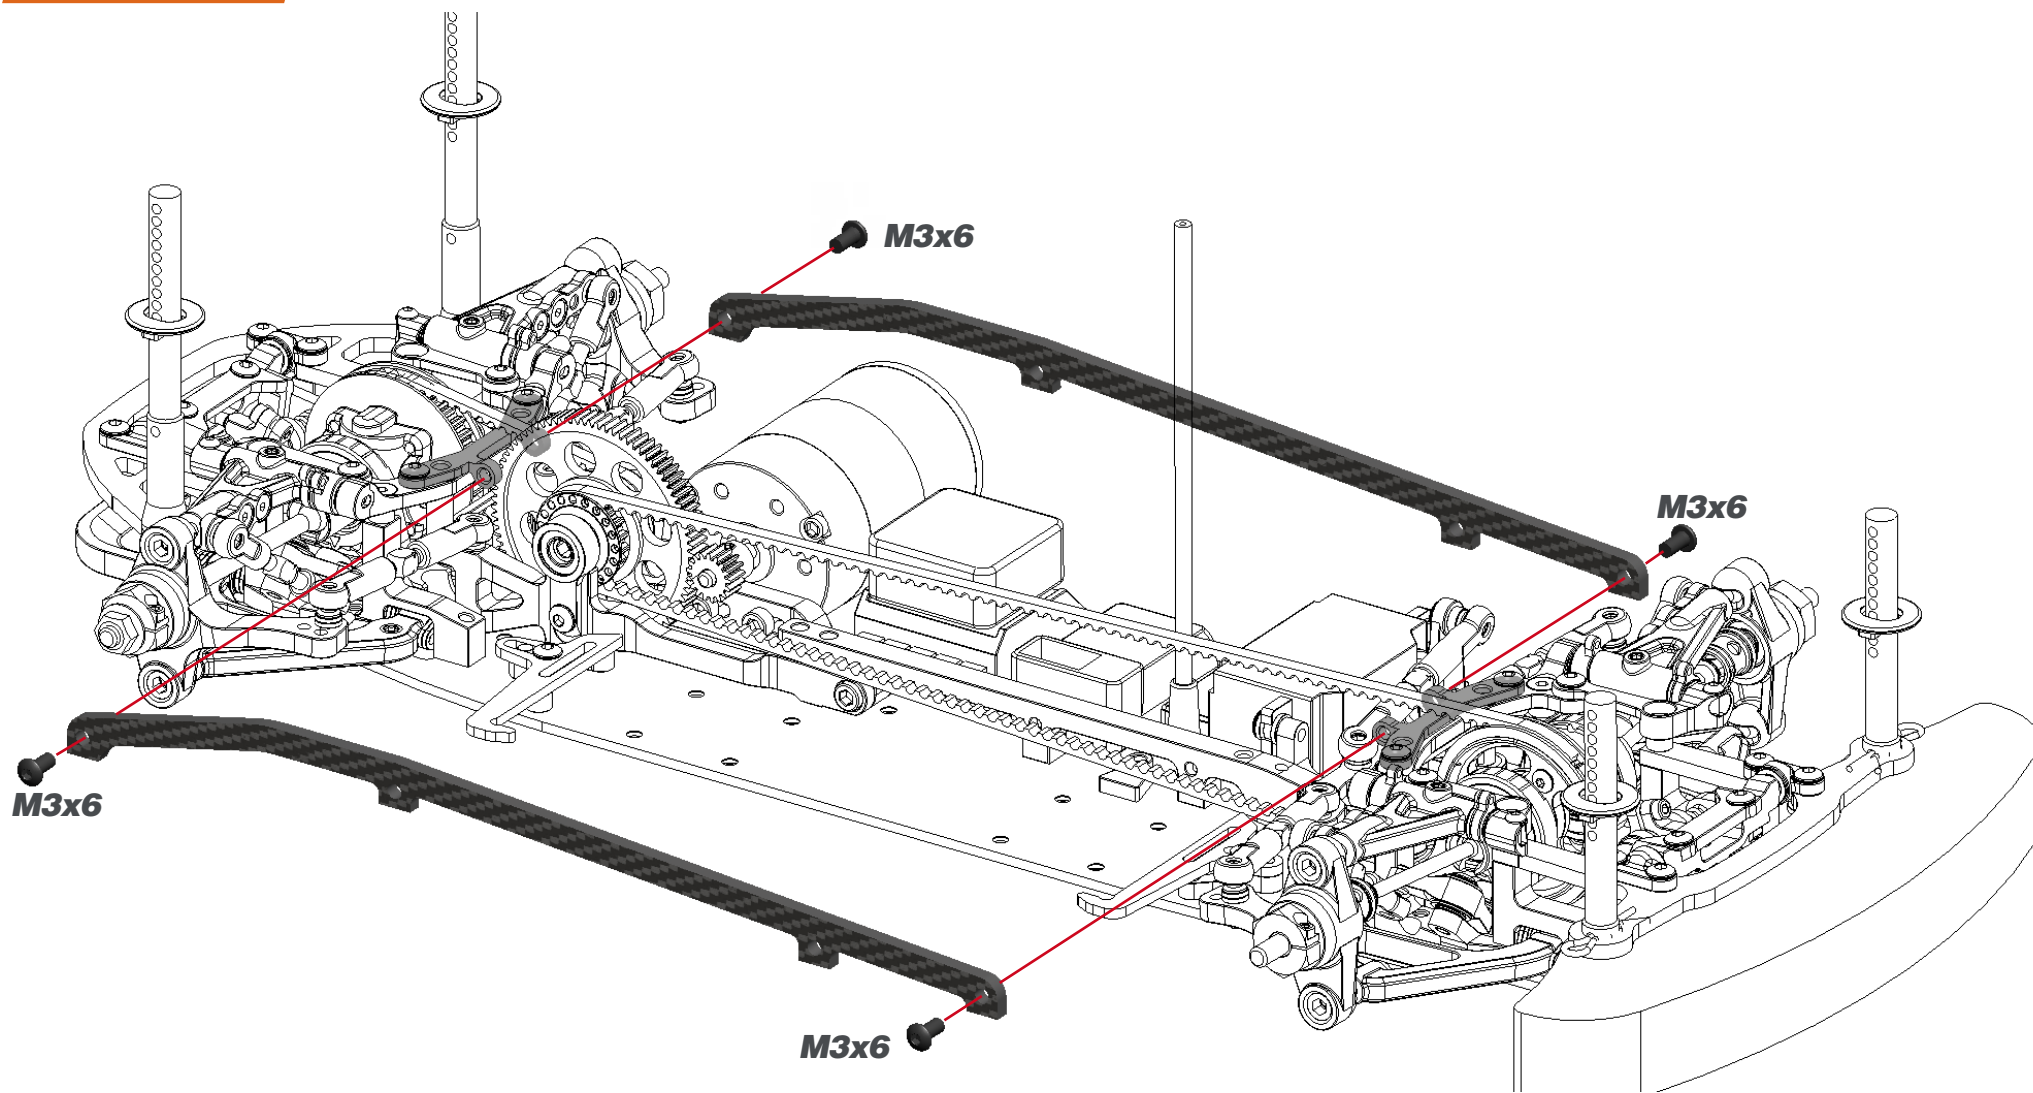

STEP 3A

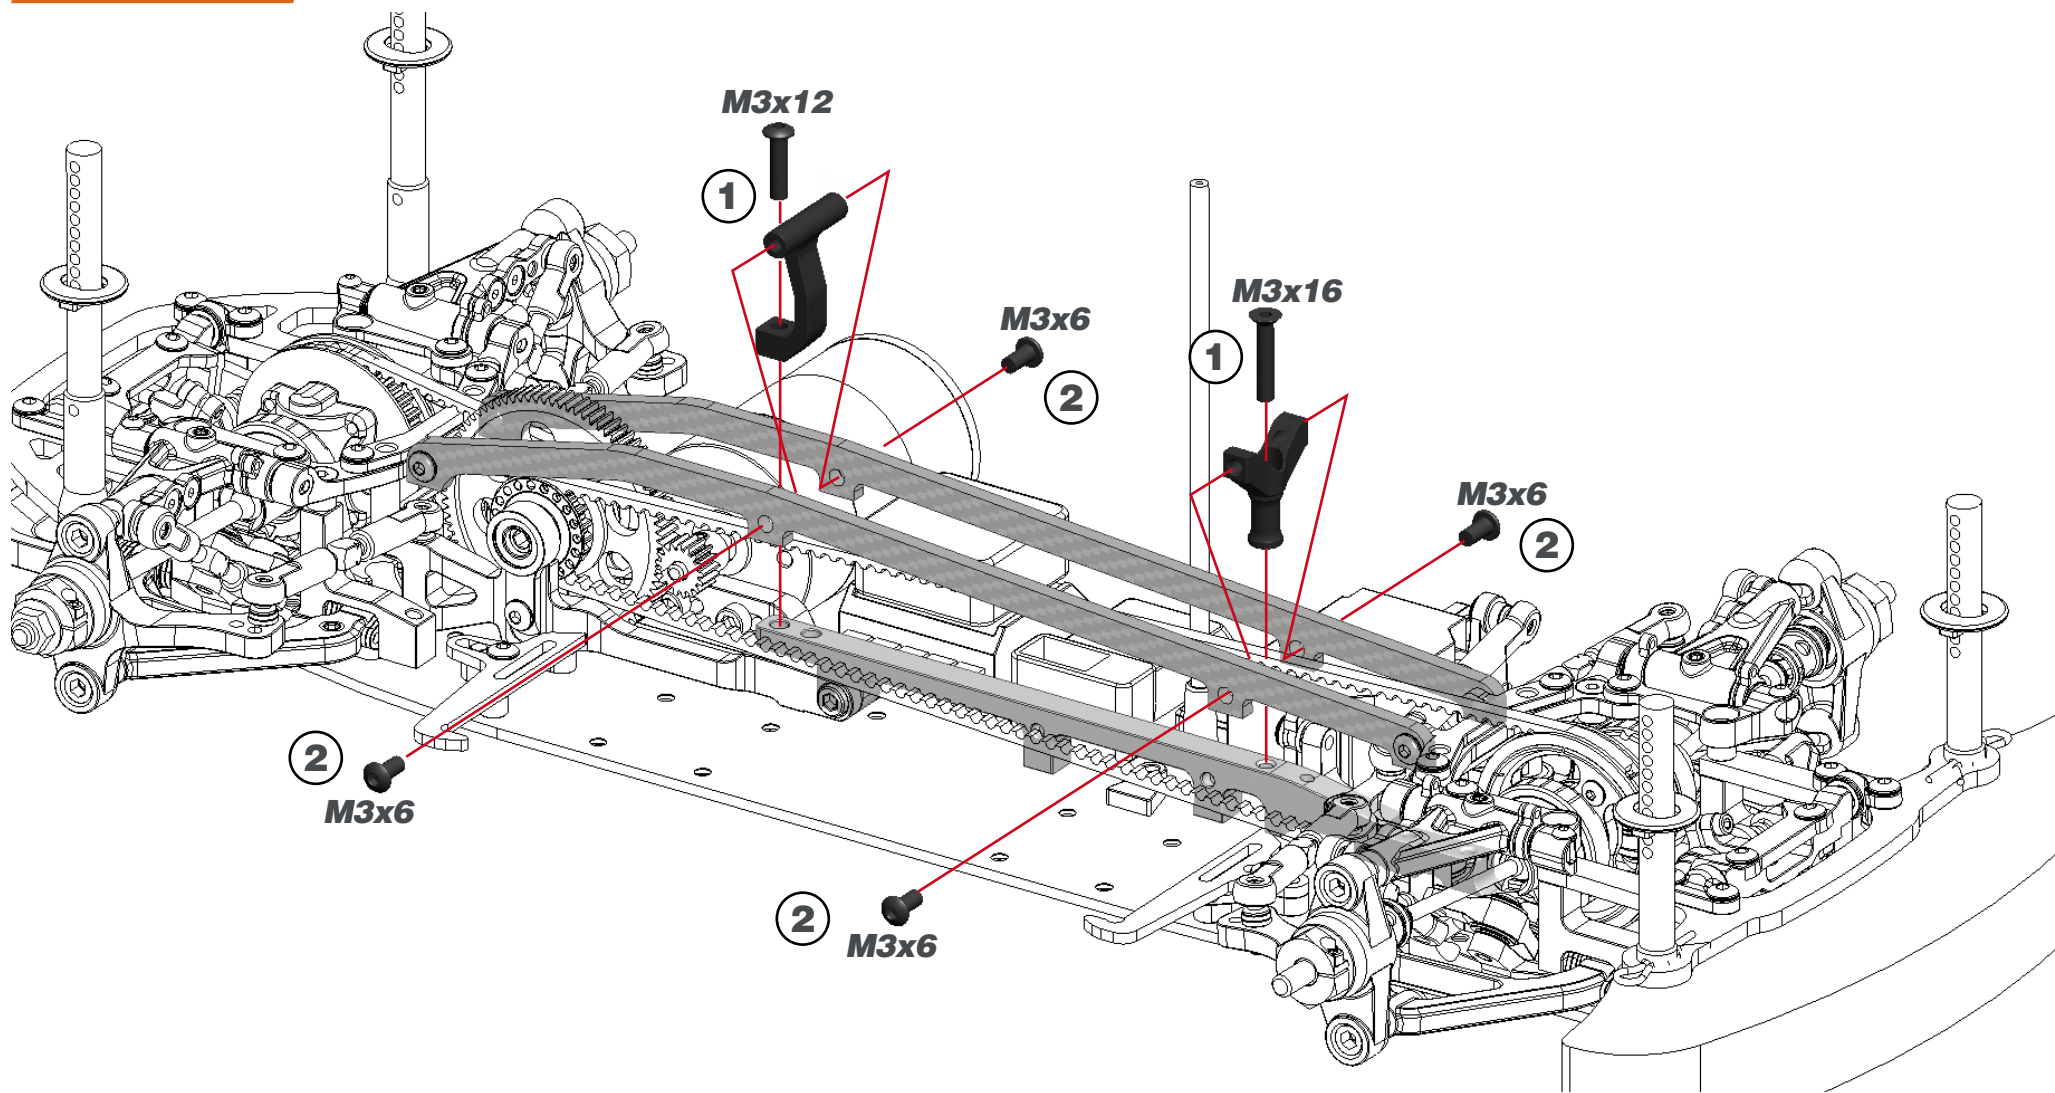

**STEP 3B**

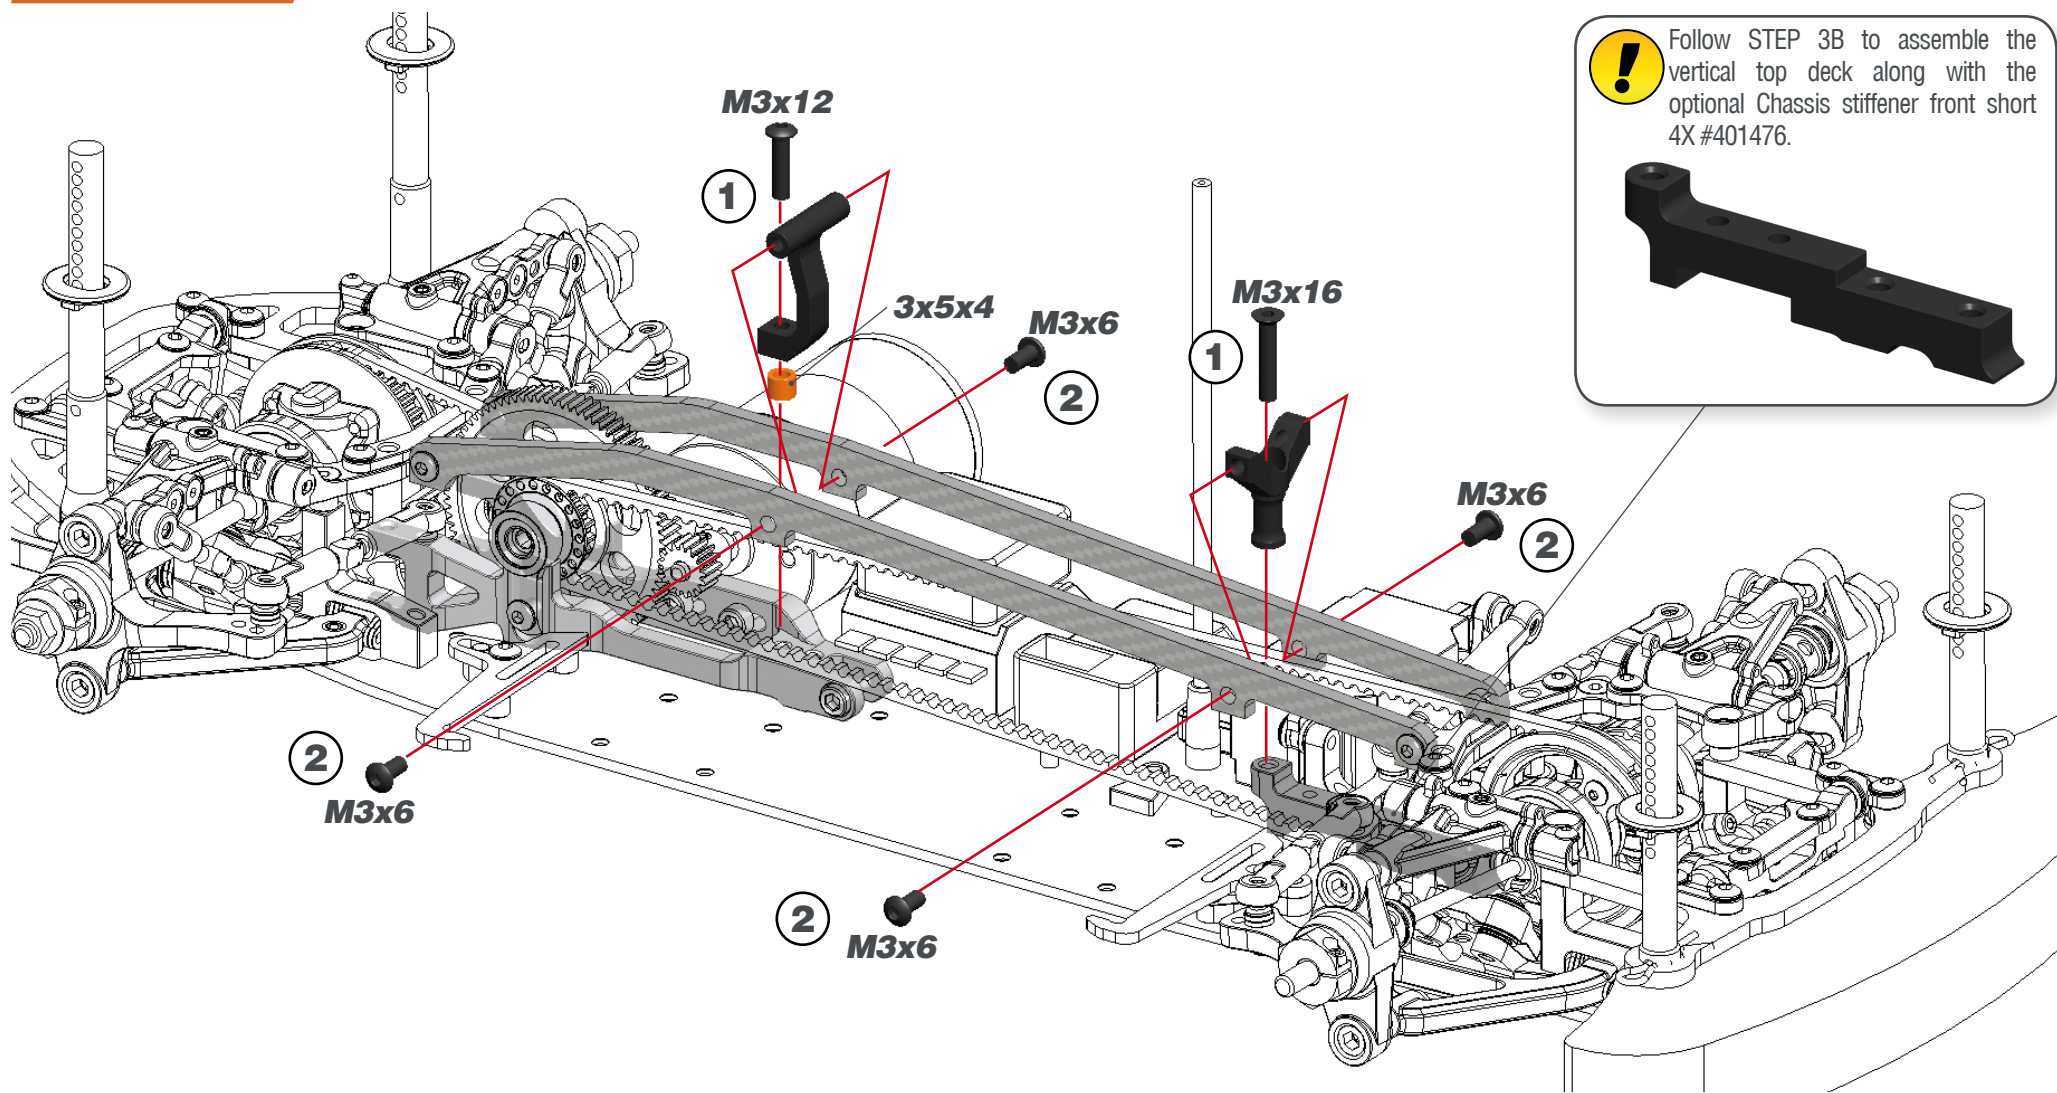

**!** Follow STEP 3B to assemble the vertical top deck along with the optional Chassis stiffener front short 4X #401476.

